

FIG. 1
PRIOR ART

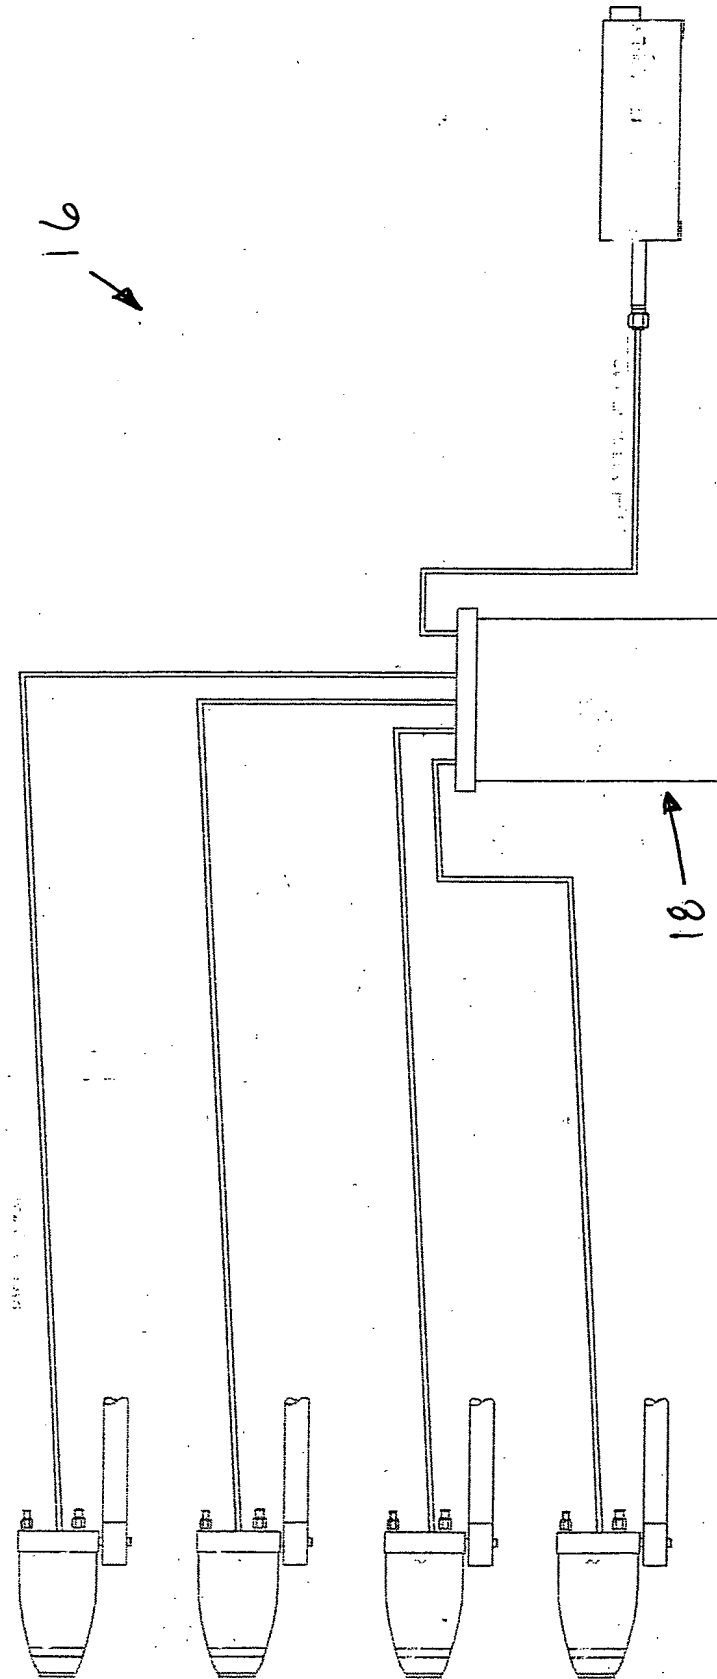


FIG. 2
PRIOR ART

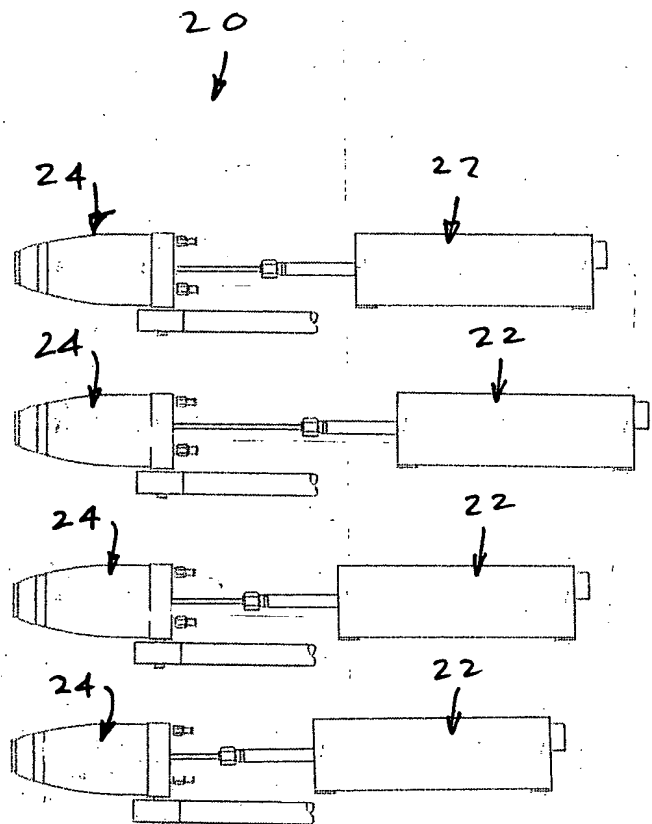


FIG. 3
PRIOR ART

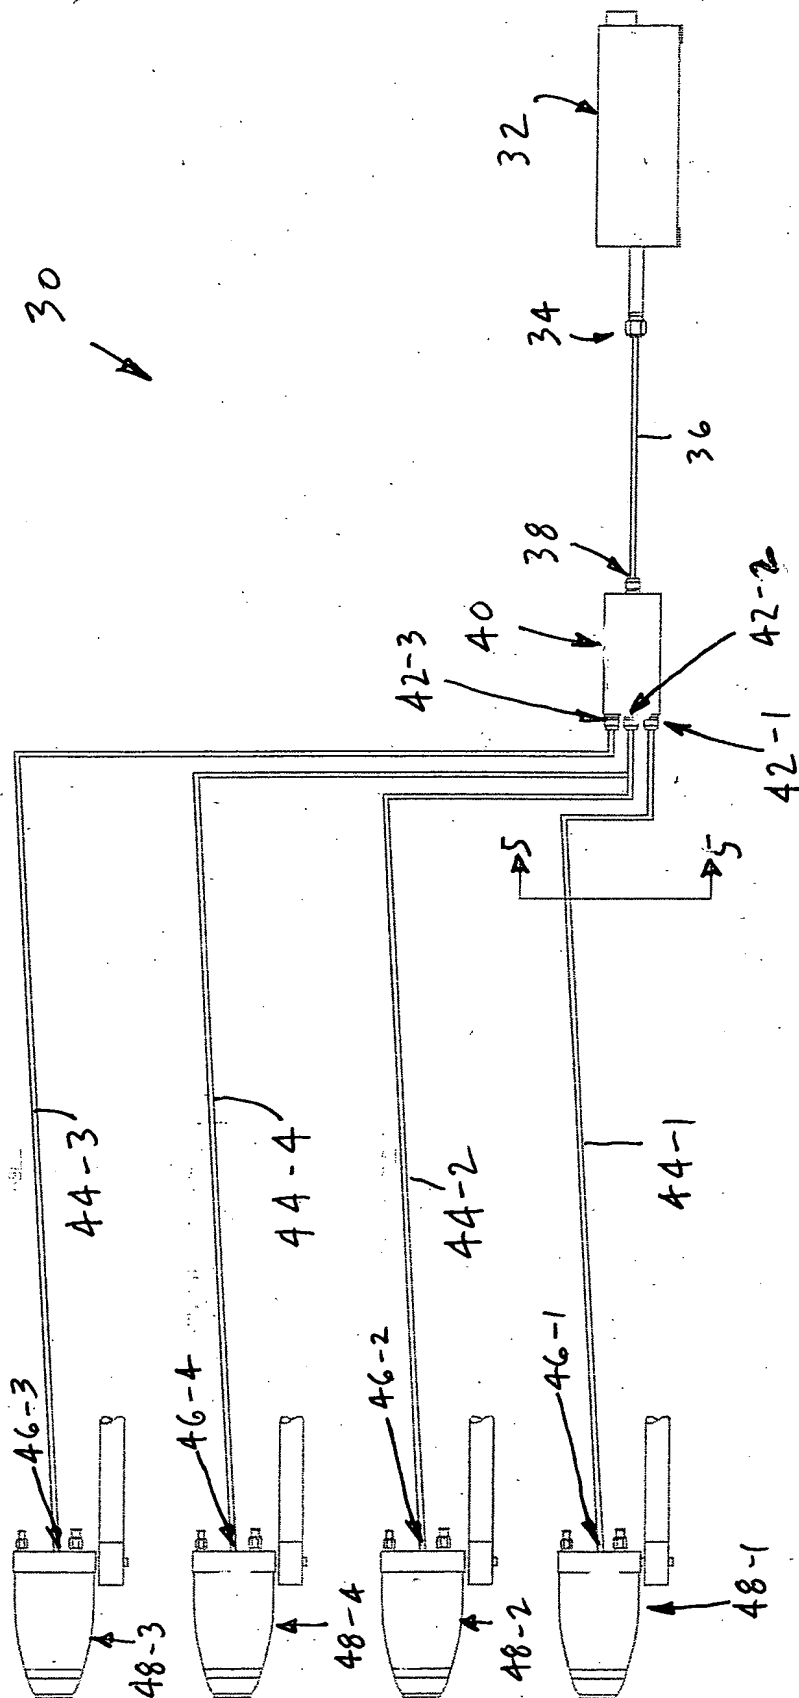


FIG. 4

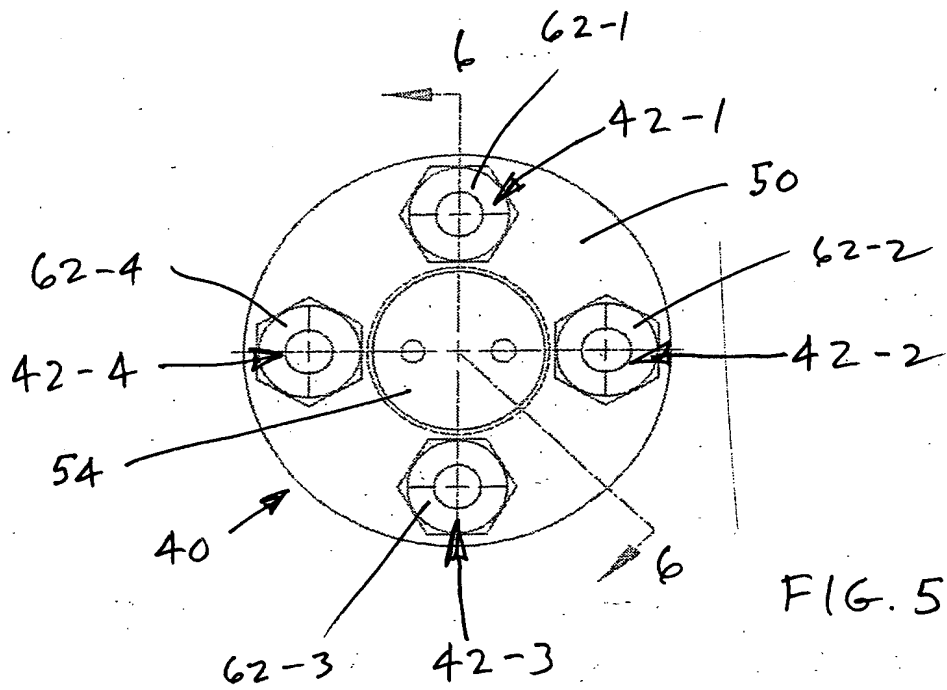


FIG. 5

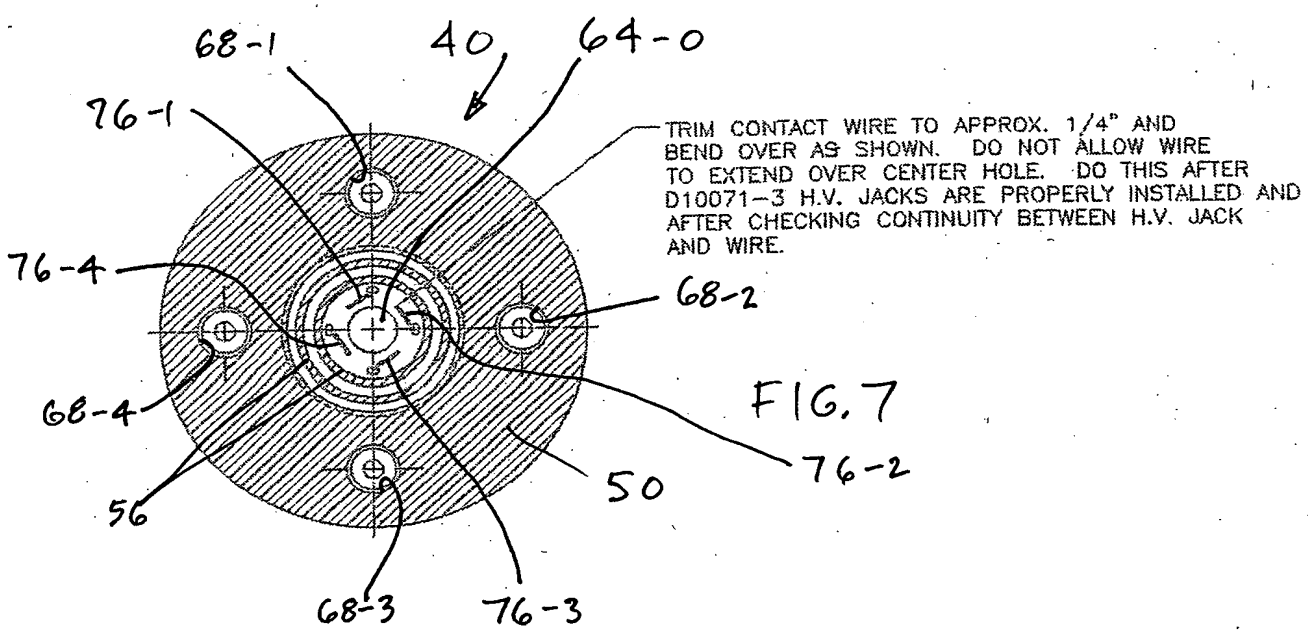


FIG. 7

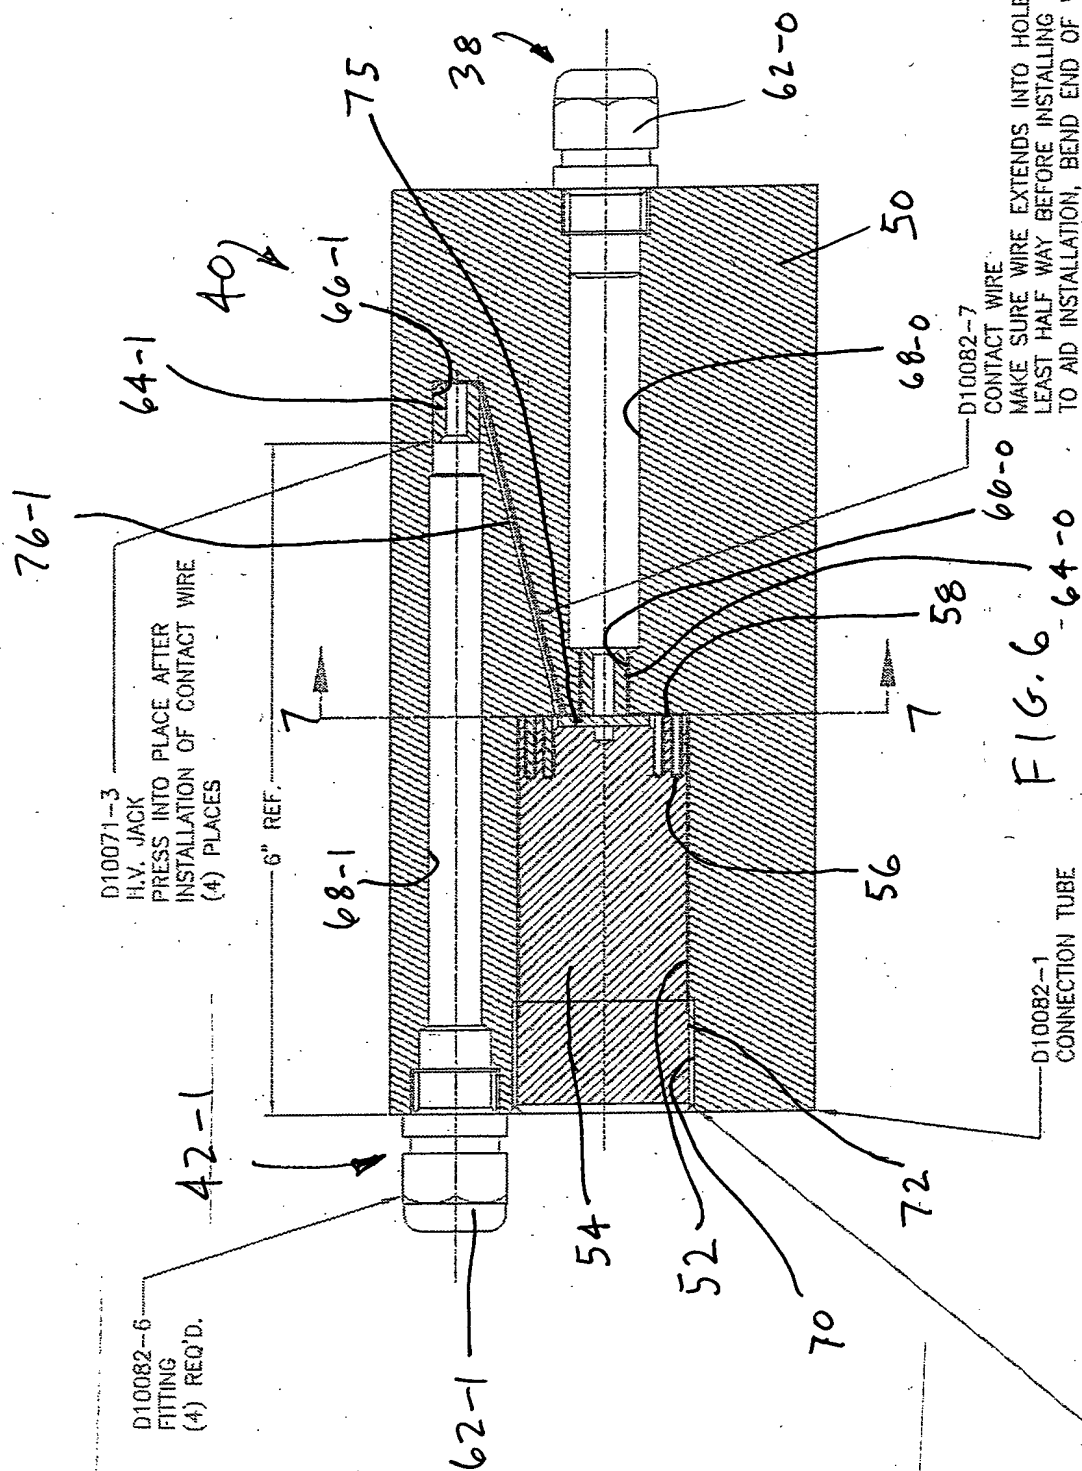


FIG. 6

D10082-1
CONNECTION TUBE

D10071-2
PLUG

BEFORE INSTALLING, APPLY A COATING OF 59972-00
DIELECTRIC GREASE TO LABYRINTH, O.D. AND THREADS
TIGHTEN INTO PLACE UNTIL FLUSH OR SLIGHTLY BELOW
SURFACE OF D10082-1 CONNECTION TUBE

D10071-3
H.V. JACK
PRESS INTO PLACE AFTER
INSTALLATION OF CONTACT WIRE
(4) PLACES

D10082-7
CONTACT WIRE
MAKE SURE WIRE EXTENDS INTO HOLE AT
LEAST HALF WAY BEFORE INSTALLING D10071-3 H.V. JACK
TO AID INSTALLATION, BEND END OF WIRE APPROX.
10" AND REMOVE ALL BUURS OR SHARP END